

KitchenAid®

food grinder, slicer/shredder, fruit/vegetable strainer

stand mixer attachment pack model FPPA



versatile

GRIND MEATS, FIRM FRUIT, VEGETABLES AND DRY BREAD
PUREE, STRAIN, SLICE AND SHRED FRUITS AND VEGETABLES

durable

FINE AND COARSE STAINLESS STEEL GRINDING PLATES
STAINLESS STEEL SLICING AND SHREDDING CONES

convenient

EASY TO ASSEMBLE, ATTACH AND USE

includes



related attachments





KITCHENAID® FOOD GRINDER, SLICER/SHREDDER AND FRUIT/VEGETABLE STRAINER ATTACHMENT PACK PROVIDES UNLIMITED WAYS TO PREP FOODS

FOOD GRINDER, SLICER/SHREDDER AND FRUIT/VEGETABLE STRAINER

This attachment pack is ideal to slice and shred firm fruits, vegetables, nuts

and cheese. It can also be used to grind and season meats, and strain fruits

and vegetables for sauces. Includes the Food Grinder, Slicer/Shredder and





FVSP

Fruit/Vegetable Strainer. Instruction guide includes tips and recipes. FOOD GRINDER ATTACHMENT — FGA

ATTACHMENT PACK — FPPA

Two stainless steel grinding plates, fine and coarse, are included with the Food Grinder Attachment. Grind raw or cooked meat and dried bread using the fine plate. The coarse plate is used to grind firm vegetables, dried fruits, cheese and raw or cooked meat. In addition to the grinder body and plates, the attachment comes with a combination food pusher/wrench to help safely push foods into the grinder as well as to help loosen the ring from the grinder body. Instruction guide includes tips and recipes.



Four stainless steel cones are included with the Slicer/Shredder to make thick or thin slices of firm fruits and vegetables, as well as fine or coarse shreds of crisp vegetables, nuts, and firm cheese, coconut and dry bread. All four cones are easy to install and clean. The Slicer/Shredder also includes a built-in food pusher and a split hopper to accommodate big and small items.

FRUIT/VEGETABLE STRAINER — FVSP

(requires Food Grinder Attachment to use)

A strainer cone, strainer tray and splash shield fit onto the Food Grinder Attachment for straining or pureeing fruits and vegetables into foods like jams, sauces and baby food. Instruction guide includes tips and recipes.

EASY TO USE

Food Grinder, Slicer/Shredder and Fruit/Vegetable Strainer and are easy to assemble. The KitchenAid® Stand Mixer powers the Food Grinder, Slicer/Shredder and Fruit/Vegetable Strainer, leaving both hands free to work with the food.

EASY TO CLEAN

The Food Grinder's knife and grinding plates should be washed in warm, sudsy water and dried thoroughly. All other parts of the Food Grinder, as well as all parts of the Slicer/Shredder and Fruit/Vegetable Strainer, are dishwasher safe.

VERSATILE

KitchenAid® Stand Mixer Attachments are designed to work with all models of KitchenAid® Household Stand Mixers.

nt Pack 050946 000)183
	11 1 4 5 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7



Dimensions in inches (centimeters); weights in pounds (kilograms)

-		
product carton		
Height	7.8 (19.7)	
Width	16.8 (42.5)	
Depth	9.8 (24.8)	
Shipping Wt.	7.0 (3.18)	
Master Pack	2 Units	
C:E:		

change without notice.

HASSLE FREE, 1-YEAR REPLACEMENT WARRANTY



If this stand mixer attachment fails within

the first year, KitchenAid will deliver a replacement free of charge. It's the most consumer-friendly warranty in the industry!

For more information, call our toll-free KitchenAid Customer Satisfaction Center at 1-800-541-6390 or visit KitchenAid com

